

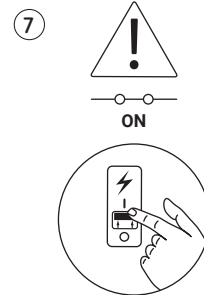
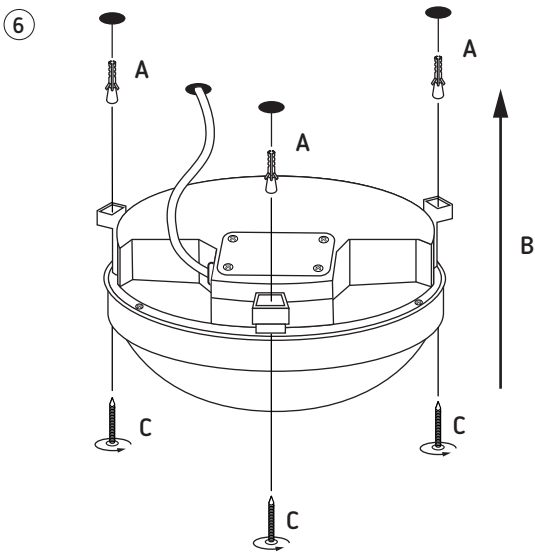
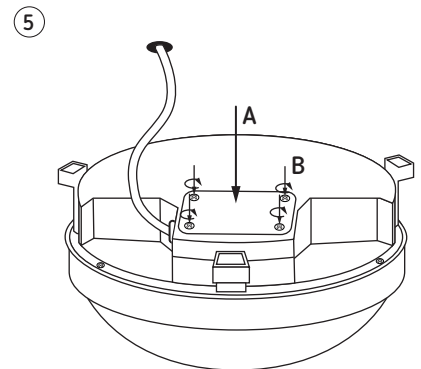
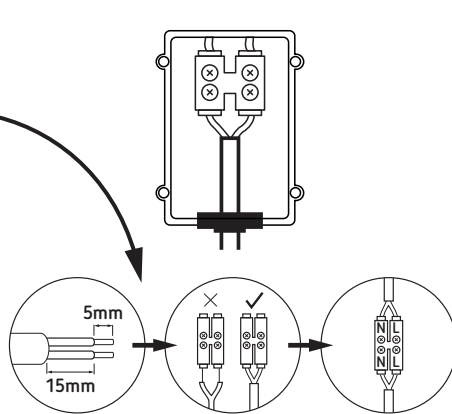
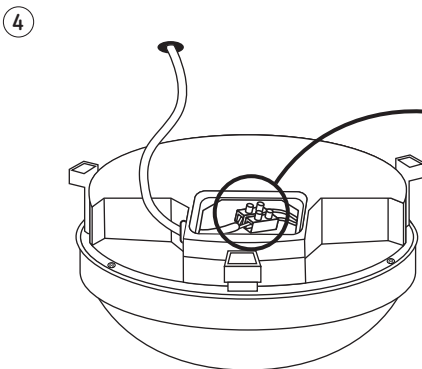
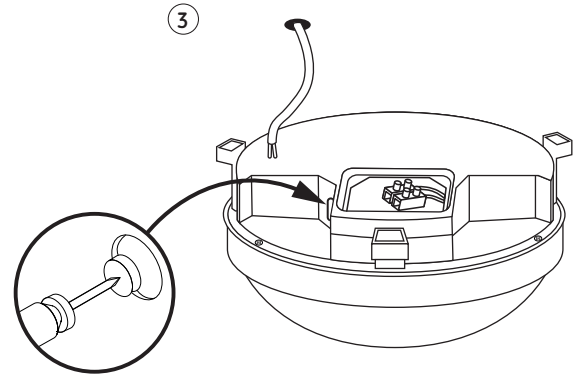
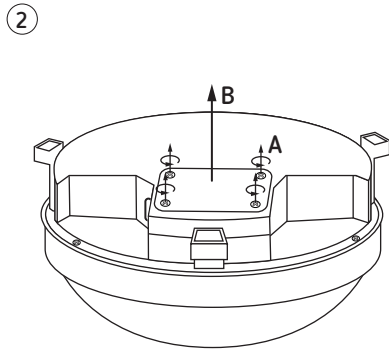
 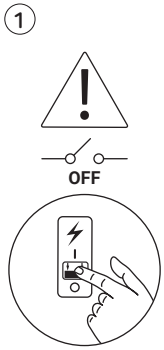


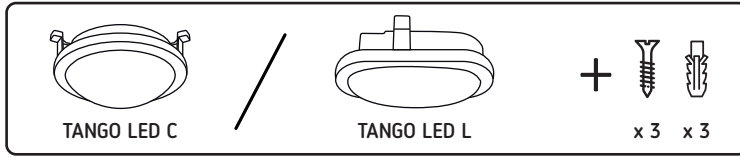

E TANGO LED C 6W NW, TANGO LED C 12W NW, TANGO LED L 12W NW
A14-E

F TANGO LED L 6W NW
A14-F



1 → 6 C, B → 5 B, A → 4



